




TRM Application Chart

TRACTOR	TYRE SECTION	OUTSIDE FLAT AIR BAG	OUTSIDE HEAT PAD		INSIDE HEAT PAD		CYLINDER AIR BAG	TOP PLATE REQUIRED
			RADIAL TYRE	X-PLY TYRE	RADIAL TYRE	X-PLY TYRE		
9.5-32 11.2-38 12.4-38	TRUCK							
	8.25							
	9.00							
	10.00	TRM4815	TRR2213H	TRR2210H	TRR2210H	TRR2213H	TR911/13W FRB	*TP1 OR *TP2
	11.00							
	12.00							
	315/80							
	SUPER SINGLE							
	365/80	TRM4815	TRR2213H	TRR2210H	TRR2210H	TRR2213H	TR1315/15W	*TP1
	TO							
	445/65							
14.4 - 24	OTR							
TO	13.00	TRM4815	MR1616H	TRR2213H	TRR2213H	MR1616H	TR1315/15W	*TP2
16.9 - 28	TO							
	17.5 - 25							

*Guide to Top Plates [TP]

	TRUCK (INC. SUPER SINGLES)	TRACTOR	OTR
Top Plate 1 [TP1]			
Top Plate 2 [TP2]			

RECOMMENDED OPERATING PRESSURE FOR AIR BAGS

OUTSIDE FLAT AIR BAG: 32PSI

CYLINDER AIR BAG: 32PSI

IMPORTANT- DO NOT LEAVE VULCANISING EQUIPMENT UNATTENDED DURING OPERATION